



HP iPAQ h4155 battery replacement

This guide will demonstrate how to replace the battery

Written By: John Pagliero



INTRODUCTION

This guide will illustrate how to correctly remove and replace the battery of the iPAQ h4155

Step 1 — Battery removal



- Slide the silver release tab up and simultaneously lift the cover up from the left side.

Step 2



- Push the tab from left to right to remove the cover.

Step 3



- Now lift the battery up and away from the device to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 02:21:01 PM.